



J1-A: Ground

J1-B&C: Switch closure when CB turned on.  
Used to remotely turn on radio power

J1-D: +24 VDC Input. Will run on 12 VDC w/reduced audio

J1-E: unk

J1-F: unk

J1-J: Mic. PTT circuit; goes to ground when keyed

J1-K: Low level audio input to speaker & handset

J1-S: unk, but some cables show going to ground

J1-U: Low level output from handset mic.

Note: RETRANS lead, E, is not supported

<b>ECOMSEC</b>		
<b>Functional Schematic LS-671</b>		
R. A. Schwarz	Rev 1.0	tel. 580-298-4779
	6/8/2010	